


HP Pavilion home PC
Quick Setup
快速安裝

© 2004 Hewlett-Packard Development Company, L.P.
Printed in
www.hp.com

1 Keyboard and Mouse
鍵盤和滑鼠

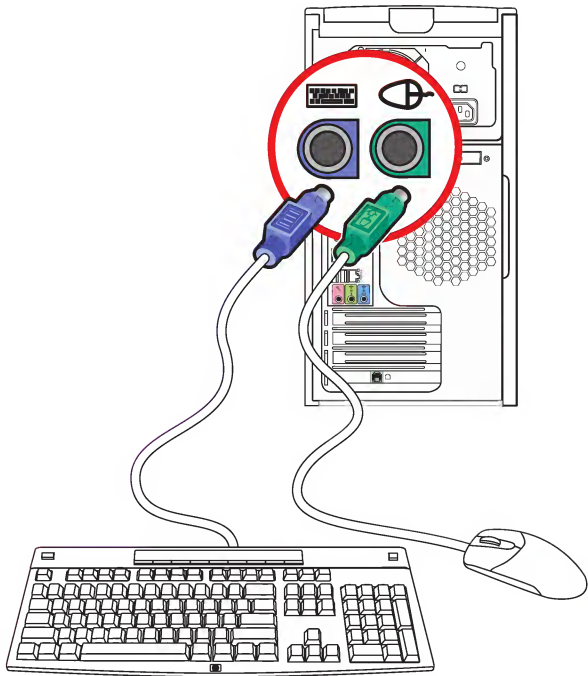


OR
或

Wireless option
Refer to the setup instructions located in your mouse/receiver box.


無線選購裝置
請參閱滑鼠/接收器盒內的安裝指示。




2 Monitor
Refer to setup instructions that came with your monitor.
顯示器
請參閱顯示器隨附的安裝指示。

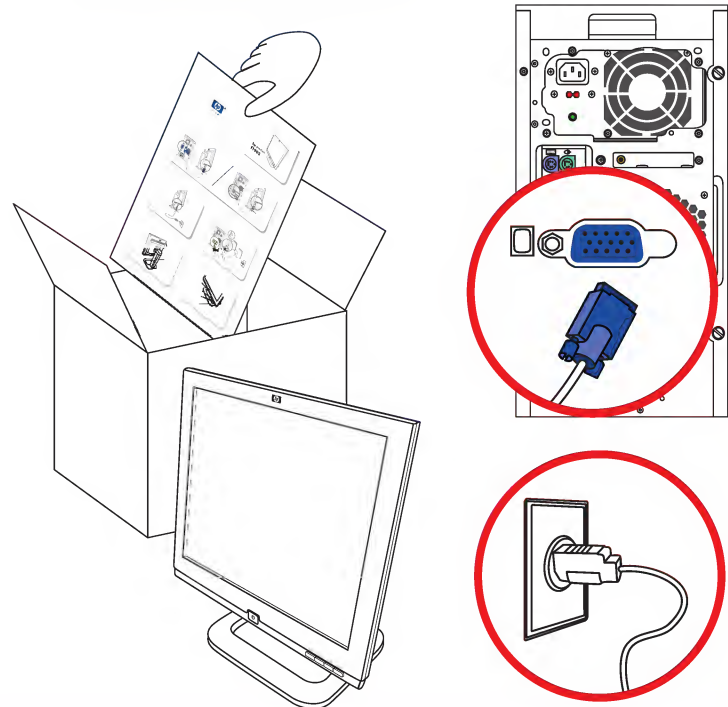


3 Speakers
Refer to setup instructions that came with your speakers.
喇叭
請參閱喇叭隨附的安裝指示。

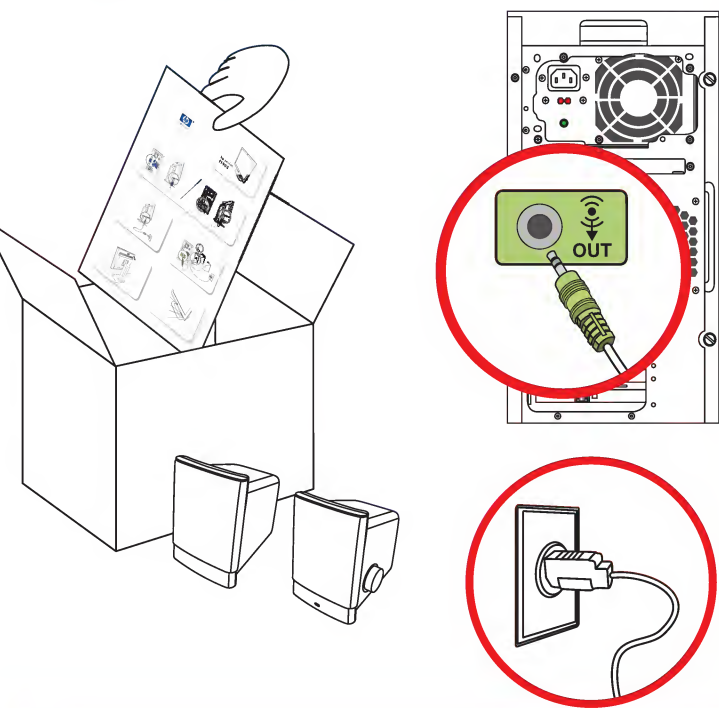


4 TV In Connect TV signal to computer
TV 輸入 將電視訊號連接到電腦

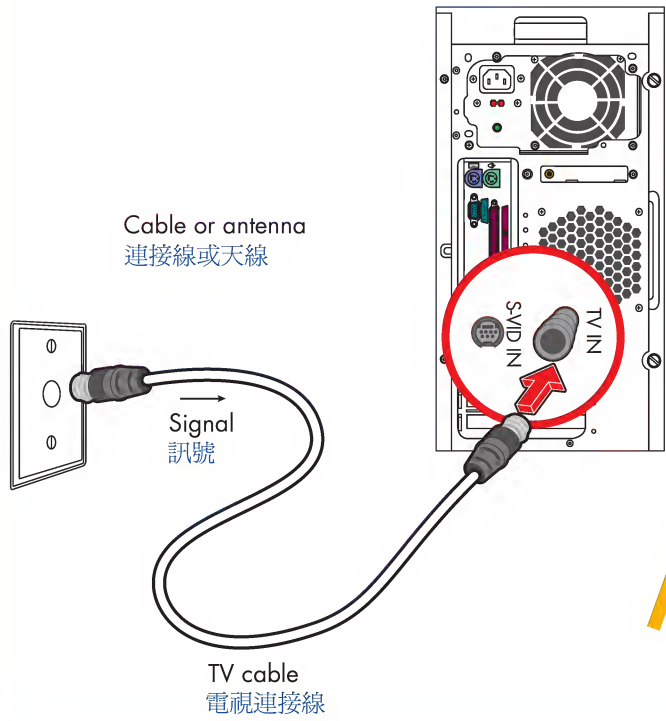

OR
或

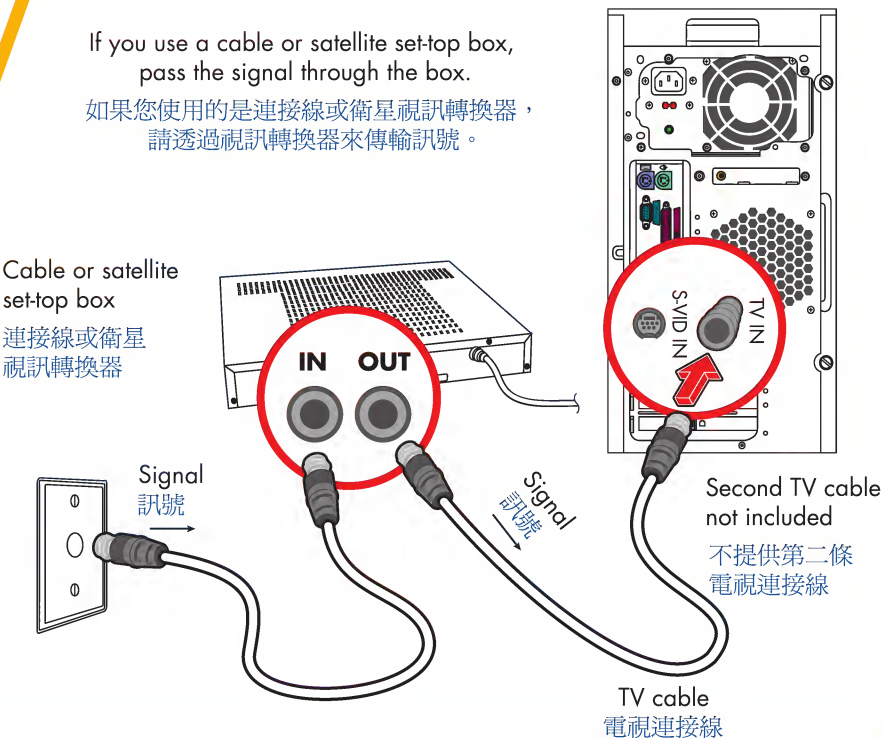


5 TV Out (TV connections are optional)
TV signal from computer to TV
TV 輸出 (電視連接為自行選擇)
從電腦連接到電視的電視訊號

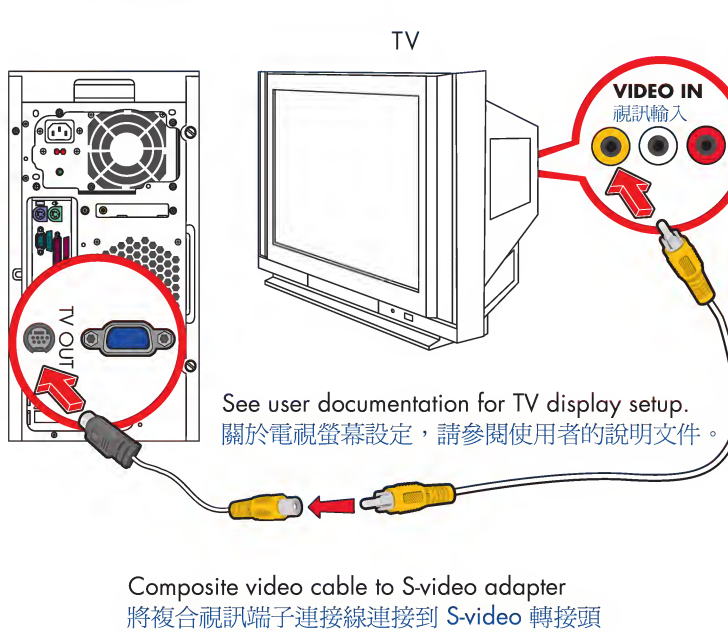


Composite video cable to S-video adapter
將複合視訊端子連接線連接到 S-video 轉接頭


6 FM antenna Select models only
FM signal to computer
FM 天線 僅限於部分型號
將 FM 訊號連接到電腦

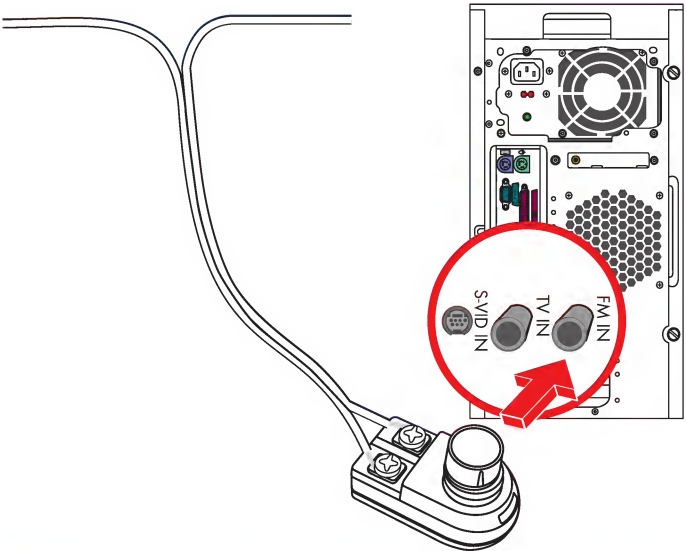

7 Power Connection
Computer to electrical outlet
Grounded connection or connection to surge protector is recommended.
電源連接
將電腦連接到電源插座
建議的連接方式為接地連接或連接到突波保護器。

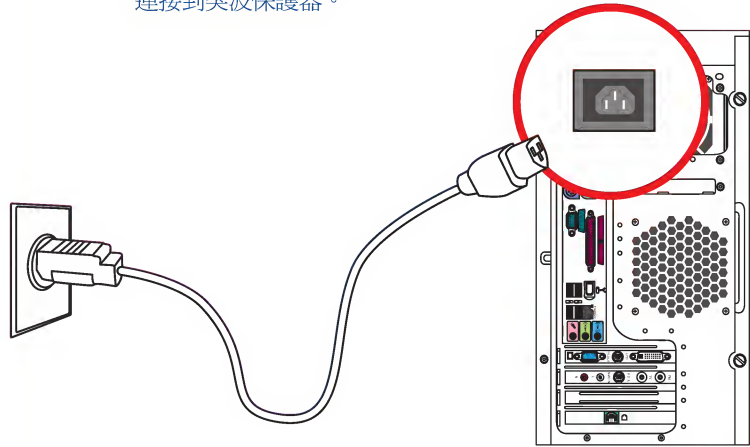


8 Modem
數據機

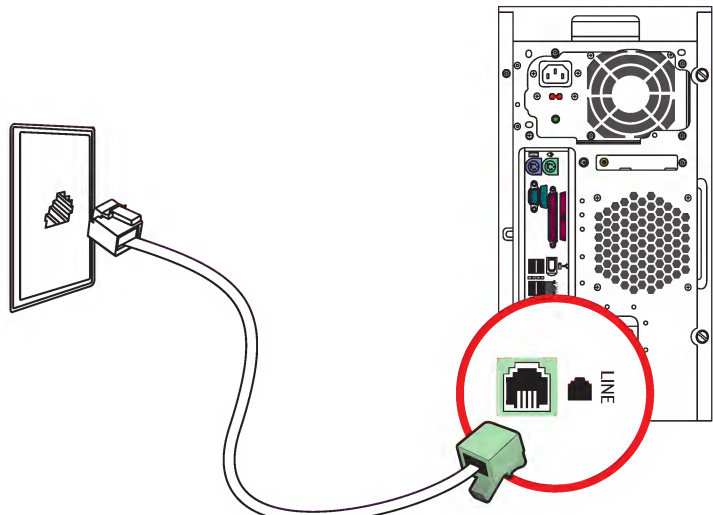

Connect modem cable to computer.
將數據機連接線插入電腦。

9 Power On
開啓電源

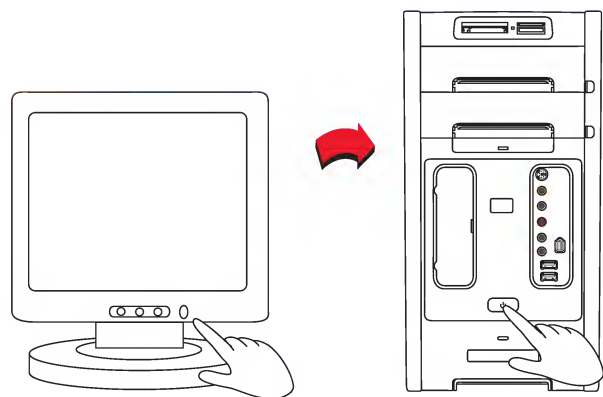


1

2

First, turn on monitor then computer.
先開啓顯示器再開啓電腦的電源。


**Your PC may look different from the ones shown here.
Component, connector location, type, and number vary by model.**

您的電腦外觀可能與下圖所示的電腦不同。
各個型號的組件、接頭位置、類型和編號亦不相同。

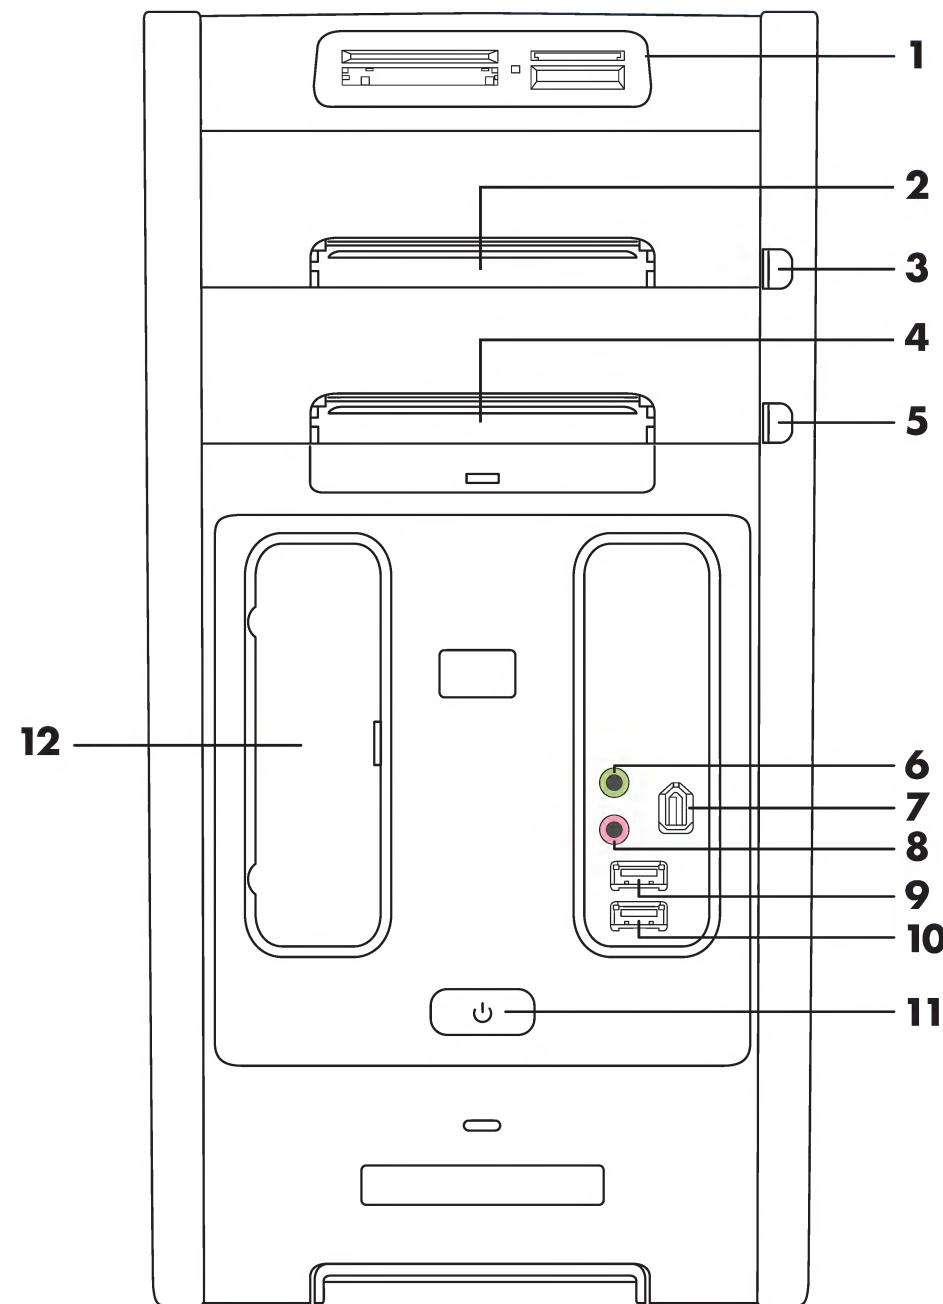

- 1 — Memory Card Reader
- 2 — Optical drive 1
- 3 — 1st Optical drive Eject button
- 4 — Optical drive 2
- 5 — 2nd Optical drive Eject button
- 6 — Headphone (Audio Line Out)
- 7 — FireWire® (IEEE 1394) port
- 8 — Microphone
- 9 — USB 2.0
- 10 — USB 2.0
- 11 — On button/indicator
- 12 — HP Personal Media Drive bay

- 1 — 讀卡機
- 2 — 光碟機 1
- 3 — 光碟機 1 的「退出」鈕
- 4 — 光碟機 2
- 5 — 光碟機 2 的「退出」鈕
- 6 — 耳機（音訊音源輸出孔）
- 7 — FireWire® (IEEE 1394) 連接埠
- 8 — 麥克風
- 9 — USB 2.0
- 10 — USB 2.0
- 11 — 主機開關按鈕/指示燈
- 12 — HP Personal Media Drive 托槽

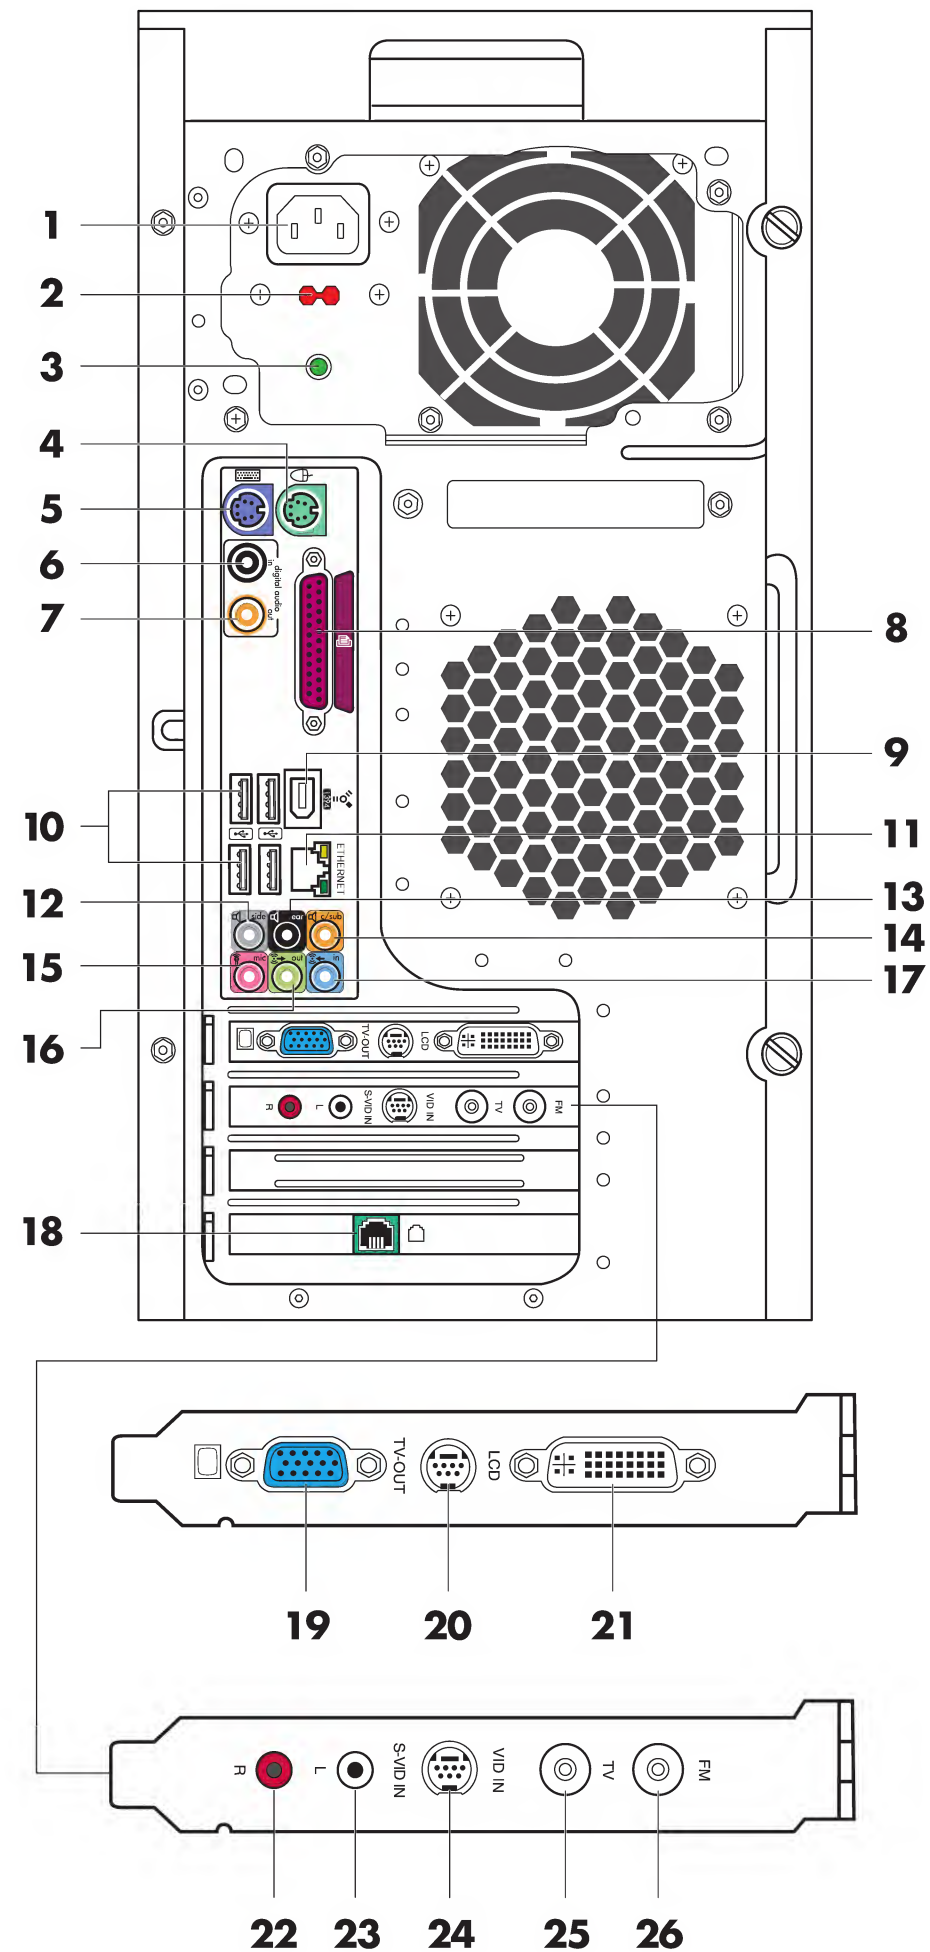

- 1 — Power Cord connector
- 2 — Voltage selector
- 3 — Power LED
- 4 — PS/2 Mouse connector
- 5 — PS/2 Keyboard connector
- 6 — Digital Audio In
- 7 — Digital Audio Out
- 8 — Parallel port
- 9 — FireWire® (IEEE 1394) port
- 10 — 4 USB 2.0 ports
- 11 — LAN (Ethernet)
- 12 — Side speaker port
- 13 — Rear speaker port
- 14 — Center speaker/subwoofer port
- 15 — Microphone connector
- 16 — Audio Line Out
- 17 — Audio Line In
- 18 — Modem (Line In RJ-11)
- 19 — VGA monitor port
- 20 — S-video (TV Out)
- 21 — LCD DVI connector (select models only)
- 22 — Audio in right
- 23 — Audio in left
- 24 — S-video In
- 25 — TV/RF-In antenna/Cable connector
- 26 — FM-In radio antenna connector (select models only)

- 1 — 電源線插孔
- 2 — 電壓選擇開關
- 3 — 電源 LED
- 4 — PS/2 滑鼠接頭
- 5 — PS/2 鍵盤接頭
- 6 — 數位音訊音源輸入孔
- 7 — 數位音訊音源輸出孔
- 8 — 並列埠
- 9 — FireWire® (IEEE 1394) 連接埠
- 10 — 4 個 USB 2.0 連接埠
- 11 — LAN（乙太網路）
- 12 — 側置喇叭連接埠
- 13 — 後置喇叭連接埠
- 14 — 中置喇叭/重低音喇叭連接埠
- 15 — 麥克風插孔
- 16 — 音訊音源輸出孔
- 17 — 音訊音源輸入孔
- 18 — 數據機（線路輸入 RJ-11）
- 19 — VGA 顯示器連接埠
- 20 — S-video (TV Out)
- 21 — LCD DVI 插孔（僅限於部分型號）
- 22 — 音訊音源輸入孔（右聲道）
- 23 — 音訊音源輸入孔（左聲道）
- 24 — S-video In
- 25 — TV/RF-In 天線/連接線接頭
- 26 — FM-In 收音機天線接頭（僅限於部分型號）